



MaharNet

How To Change WiFi Password



YGN Hot line : 09770333373




MDY Hot line : 09770333383

ONU Model - HG8347R


အဆင့်(၁) : မိမိဖုန်းမှ wifi ကိုဖွင့်ပြီး သက်ဆိုင်ရာ wifi name သို့ချိတ်ဆက်ပါ

ပုံ(၁) Mobile Phone Wifi စတင်ချိတ်ဆက်လျှင်ပေါ်သည့်ပုံ

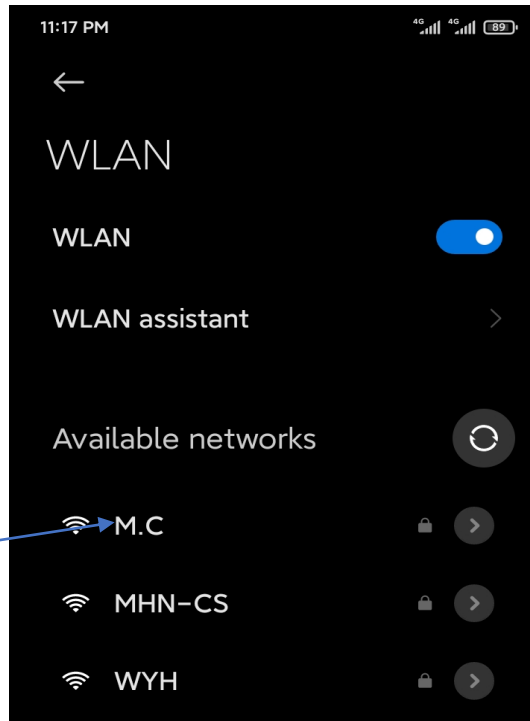

မိမိထားထားသော wifi name ကိုနှိပ်ပါ

ပုံ(၂) Password ရိုက်ရမည့်Boxပုံ

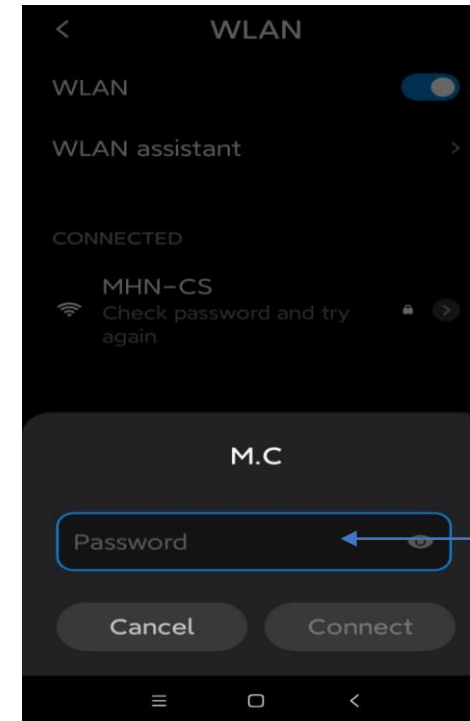


Password ရိုက်ထည့်ပါ


စာမျက်နှာ ၂/၈

အဆင့်(၂) : မိမိဖုန်းမှ Browser သို့သွားပါ Browser တွင် 192.168.100.1 ကိုရိုက်ထည့်ပါ

ပုံ(၃) မိမိဖုန်း Browser ပုံ

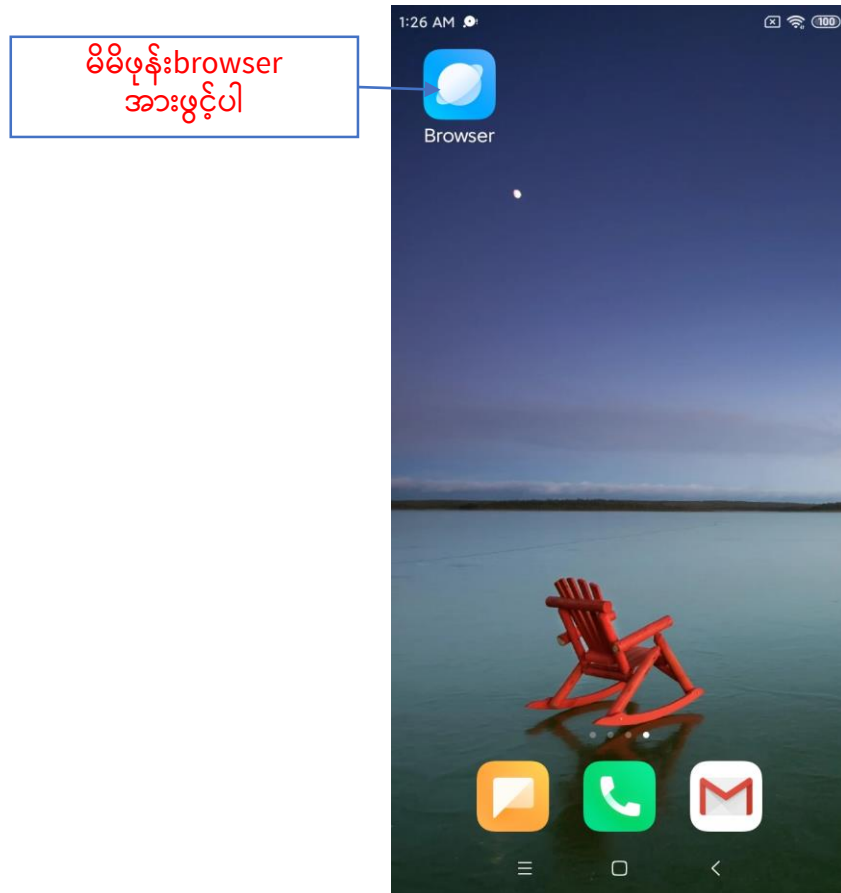


ပုံ(၄) Browserတွင် 192.168.100.1 ရိုက်ထည့်ထားသည့်ပုံ

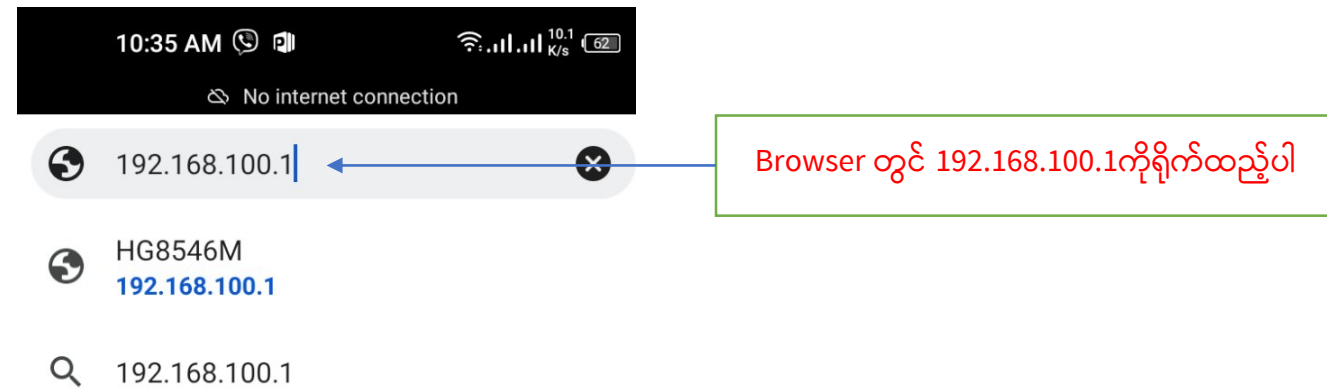

စာမျက်နှာ ၃/၈

- Browser တွင် 192.168.100.1 ရိုက်ထည့်ပြီးပါက ONU Login page ပေါ်လာပါလိမ့်မည်
ထိုသို့ပေါ်လာပါက username တွင် root ကိုရိုက်ပါ password တွင် admin ကိုရိုက်ပြီး login Box ကိုနှိပ်ပါ

ပုံ(၅)ONU Login page ပေါ်လာပုံ

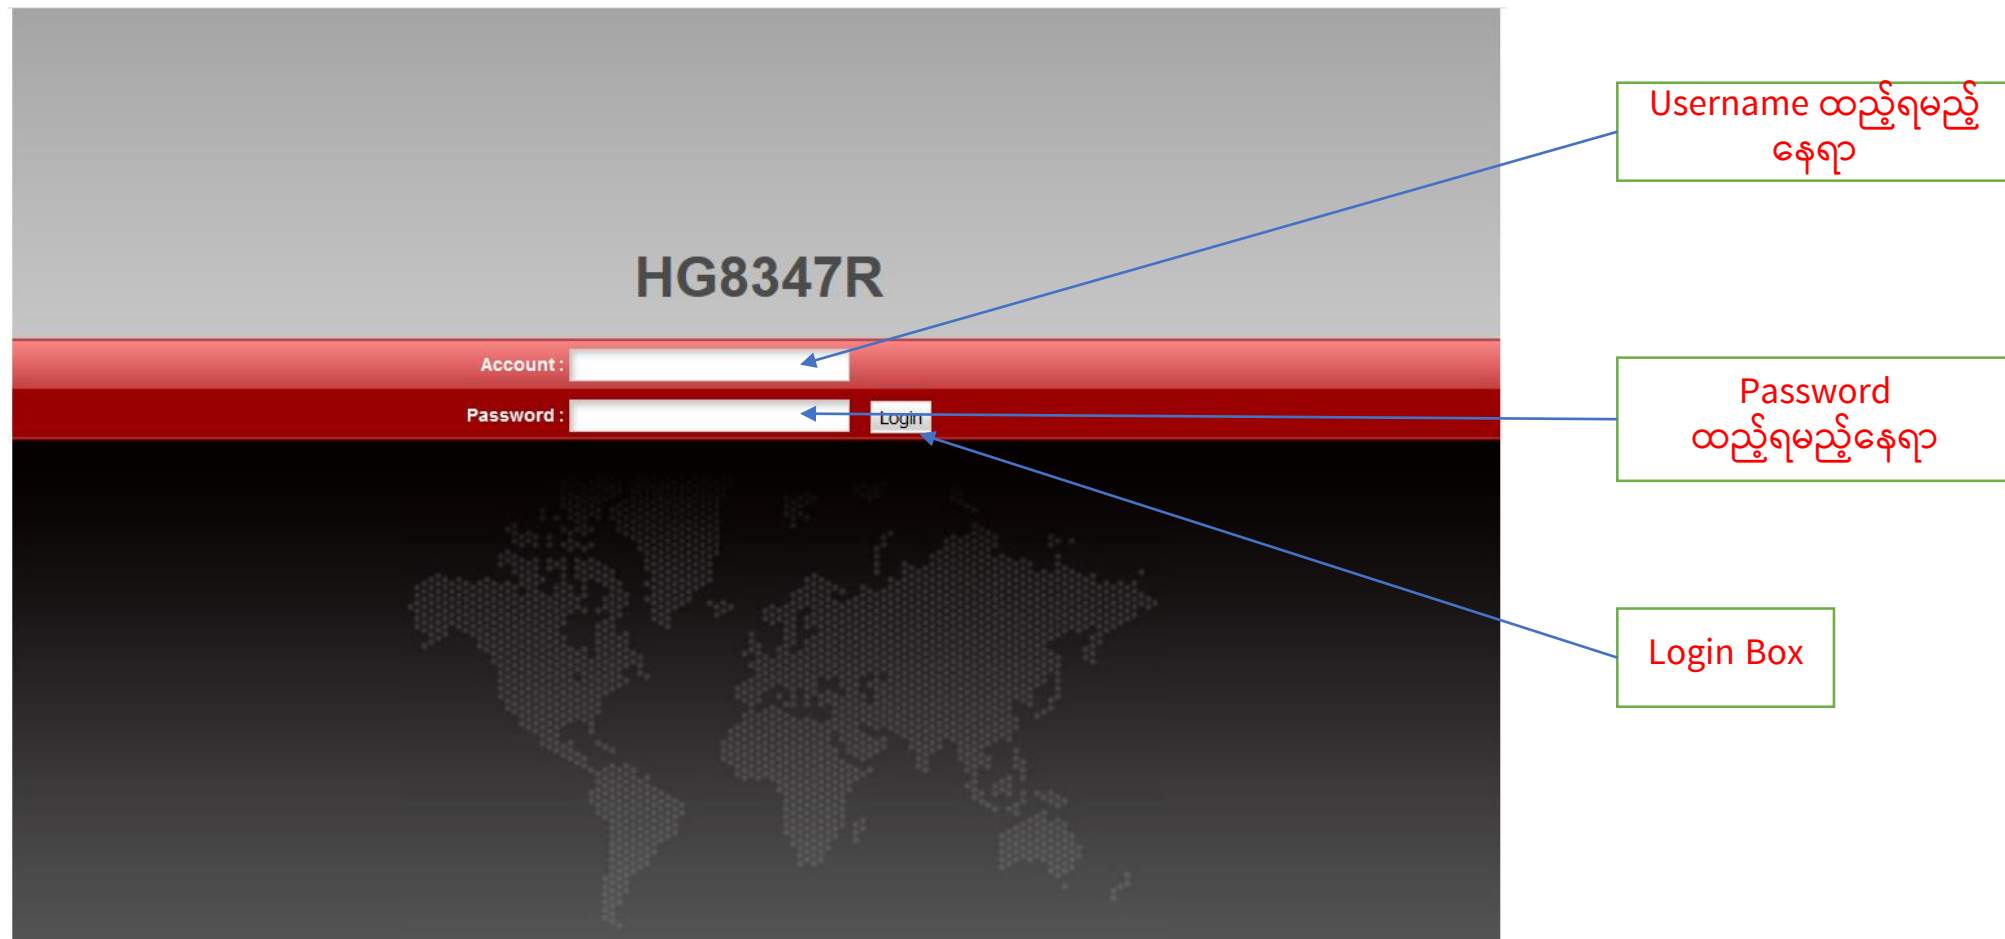

အဆင့်(၃) : Login ကိုနှိပ်ပြီးပါက ONU ထဲသို့ရောက်ရှိသွားပါမည် ထို့နောက် Setup Page ပေါ်လာပြီးပါက **WLAN Tag** ကိုနှိပ်ပါ

ပုံ(၆) ONU Setup Page ပေါ်လာသည့် ပုံ

HG8347R

Logout

StatusWANLANIPv6WLANSecurityForward RulesNetwork ApplicationSystem Tools

WAN Information

VoIP Information

WLAN Information

Smart WiFi Coverage

Eth Port Information

DHCP Information

Optical Information

Device Information

User Device Information

Service Provisioning Status

Status > Device Information

On this page, you can view basic device information.

Device Type:	HG8347R
Description:	HG8347R GPON Terminal (CLASS B+/PRODUCT ID:215008563217SH031287/CHIP:00050020170615)
SN:	48575443267635A1 (HWTC267635A1)
Hardware Version:	10C7.A
Software Version:	V3R017C10S125
Manufacture Info:	215008563217SH031287.C422
ONT Registration Status:	O5(Operation state)
ONT ID:	3
CPU Usage:	37%
Memory Usage:	76%
Custom Info:	COMMON
System Time:	2024-12-13 15:21:32+00:00

Page မှ WLAN Tag

ပုံ(၇) Page မှ WLAN tag သို့ ဝင်ထားသည့်ပုံ

HG8347R

StatusWANLANIPv6WLANSecurityForward RulesNetwork ApplicationSystem Tools

WLAN Basic ConfigurationWLAN > WLAN Basic Configuration

WLAN Advanced ConfigurationAutomatic WiFi ShutdownWiFi Coverage Management

On this page, you can set basic WLAN parameters(When the WLAN function is disabled, this page is blank).

⚠ Caution:

- Wireless network services may be interrupted temporarily after you modify wireless network parameters.
- It is recommended that you use the WPA2 or WPA/WPA2 authentication mode for security purposes.

☒ Enable WLAN

NewDelete

	SSID Index	SSID Name	SSID Status	Number of Associated Devices	Broadcast SSID	Security Configuration
☐	1	MHN	Enabled	32	Enabled	Configured

SSID Configuration Details

SSID Name:

MHN

*(1-32 characters)

Enable SSID:

☒

Number of Associated Devices:

32

*(1-32)

Broadcast SSID:

☒

Enable WMM:

☒

Authentication Mode:

WPA/WPA2 PreSharedKey

▼

Encryption Mode:

TKIP&AES

▼

WPA PreSharedKey:

••••••••

☒ Hide *(8-63 characters or 64 hexadecimal characters)

WPA Group Key Regeneration Interval:

3600

*(600-86400s)

Enable WPS:

☐

WPS Mode:

PBC

▼

PBC:

Start WPS

Apply

Cancel

စာမျက်နှာ ၆/၈

အဆင့်(၄) : WLAN Tag ထဲမှ WPA PreSharedKey Box ထဲတွင် ရှိနှင့်သော Password အဟောင်းကိုဖျက်ပါ

ပုံ(၈) Password အဟောင်းပေါ်လာသည့်ပုံ

HG8347R

Logout

Status

WAN

LAN

IPv6

WLAN

Security

Forward Rules

Network Application

System Tools

WLAN Basic Configuration

WLAN Advanced Configuration

Automatic WiFi Shutdown

WiFi Coverage Management

WLAN > WLAN Basic Configuration

On this page, you can set basic WLAN parameters(When the WLAN function is disabled, this page is blank).
⚠ Caution:
1. Wireless network services may be interrupted temporarily after you modify wireless network parameters.
2. It is recommended that you use the WPA2 or WPA/WPA2 authentication mode for security purposes.

☒ Enable WLAN

New

Delete

	SSID Index	SSID Name	SSID Status	Number of Associated Devices	Broadcast SSID	Security Configuration
☐	1	MHN	Enabled	32	Enabled	Configured

SSID Configuration Details

SSID Name:

MHN

* (1-32 characters)

Enable SSID:

☒

Number of Associated Devices:

32

* (1-32)

Broadcast SSID:

☒

Enable WMM:

☒

Authentication Mode:

WPA/WPA2 PreSharedKey

▼

Encryption Mode:

TKIP&AES

▼

WPA PreSharedKey:

••••••••

☒ Hide * (8-63 characters or 64 hexadecimal characters)

WPA Group Key Regeneration Interval:

3600

*(600-86400s)

Enable WPS:

☐

WPS Mode:

PBC

▼

PBC:

Start WPS

Apply

Cancel

Password အဟောင်း

စာမျက်နှာ ၇/၈

အဆင့်(၅) : Password အဟောင်းကိုဖျက်ပြီး လွတ်သွားသောနေရာတွင် Password အသစ်ကိုရိုက်ထည့်ပါ ထို့နောက် **Apply** ကိုနှိပ်ပါ

ပုံ(၉) Password အဟောင်းဖျက်ပြီး သွားသည့်ပုံ

HG8347R Logout

Status WAN LAN IPv6 **WLAN** Security Forward Rules Network Application System Tools

WLAN Basic Configuration WLAN > WLAN Basic Configuration

WLAN Advanced Configuration
Automatic WiFi Shutdown
WiFi Coverage Management

On this page, you can set basic WLAN parameters(When the WLAN function is disabled, this page is blank).
⚠ Caution:
1. Wireless network services may be interrupted temporarily after you modify wireless network parameters.
2. It is recommended that you use the WPA2 or WPA/WPA2 authentication mode for security purposes.

☒ **Enable WLAN** New Delete

SSID Index	SSID Name	SSID Status	Number of Associated Devices	Broadcast SSID	Security Configuration
☐ 1	MHN	Enabled	32	Enabled	Configured

SSID Configuration Details

SSID Name: MHN * (1-32 characters)

Enable SSID: ☒

Number of Associated Devices: 32 * (1-32)

Broadcast SSID: ☒

Enable WMM: ☒

Authentication Mode: WPA/WPA2 PreSharedKey ▾

Encryption Mode: TKIP&AES ▾

WPA PreSharedKey: Hide * (8-63 characters or 64 hexadecimal characters)

WPA Group Key Regeneration Interval: 3600 *(600-86400s)

Enable WPS: ☐

WPS Mode: PBC ▾

PBC: Start WPS

Apply Cancel


Password
အသစ်ထည့်ရန်နေရာ

Password
ထည့်ပြီးနောက် Apply
ကိုနှိပ်ပါ

စာမျက်နှာ ၈/၈

- Apply နှိပ်ပြီးပါက Page ညာဘက်ထောင့်ရှိ logout ကိုနှိပ်ပြီး ONU ထဲမှပြန်ထွက်ပါ။ ထို့နောက်မိမိဖုန်းမှ Wi-Fi ကို ပြန်လည်ချိတ်ဆက်ကြည့်ပါ။ Password အသစ်တောင်းပါလိမ့်မည်။ အသစ် change လိုက်သော password ကိုရိုက်ထည့်ပြီး Password အသစ်ဖြင့် Internet အသုံးပြုနိုင်ပါပြီ။

ပုံ(၁၀) Logout button နှိပ်သည့်ပုံ

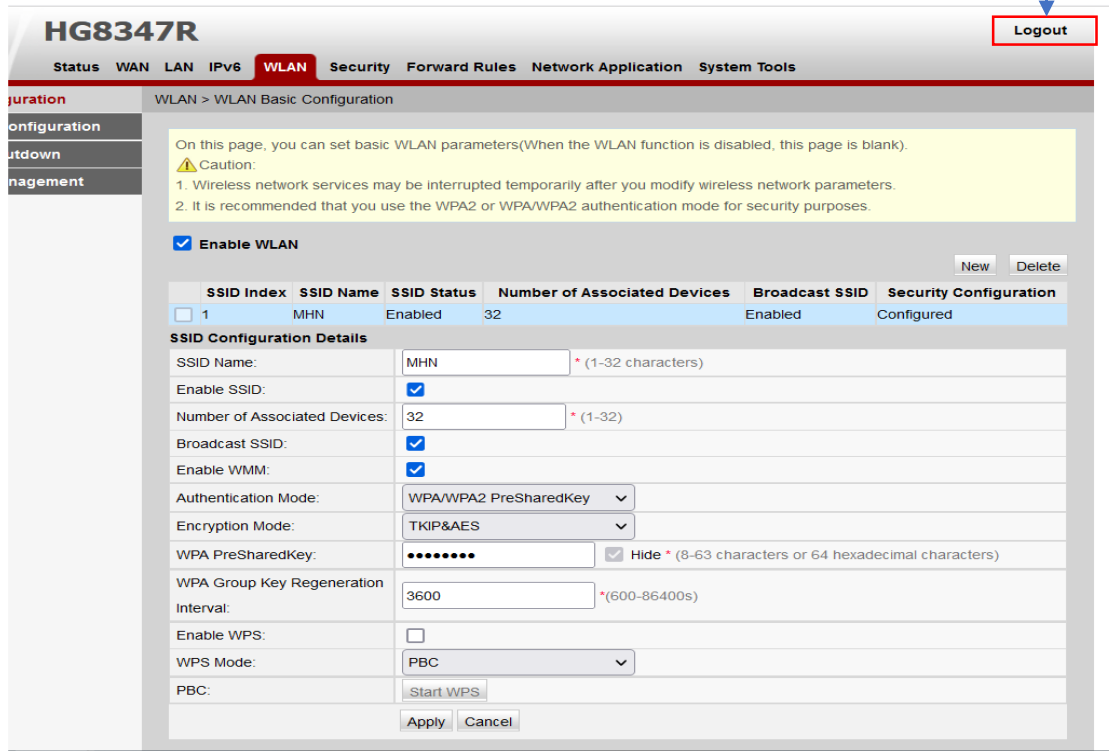

HG8347R

Status WAN LAN IPv6 **WLAN** Security Forward Rules Network Application System Tools

WLAN > WLAN Basic Configuration

On this page, you can set basic WLAN parameters (When the WLAN function is disabled, this page is blank).

⚠ Caution:

- Wireless network services may be interrupted temporarily after you modify wireless network parameters.
- It is recommended that you use the WPA2 or WPA/WPA2 authentication mode for security purposes.

☒ Enable WLAN

New Delete

SSID Index	SSID Name	SSID Status	Number of Associated Devices	Broadcast SSID	Security Configuration
☐ 1	MHN	Enabled	32	Enabled	Configured

SSID Configuration Details

SSID Name: MHN * (1-32 characters)

Enable SSID: ☒

Number of Associated Devices: 32 * (1-32)

Broadcast SSID: ☒

Enable WMM: ☒

Authentication Mode: WPA/WPA2 PreSharedKey

Encryption Mode: TKIP&AES

WPA PreSharedKey: ☒ Hide * (8-63 characters or 64 hexadecimal characters)

WPA Group Key Regeneration Interval: 3600 * (600-86400s)

Enable WPS: ☐


WPS Mode: PBC

PBC: Start WPS

Apply Cancel

Logout button

ပုံ(၁၁) Logout ထွက်သွားပြီး မြင်တွေ့ရသည့်ပုံ

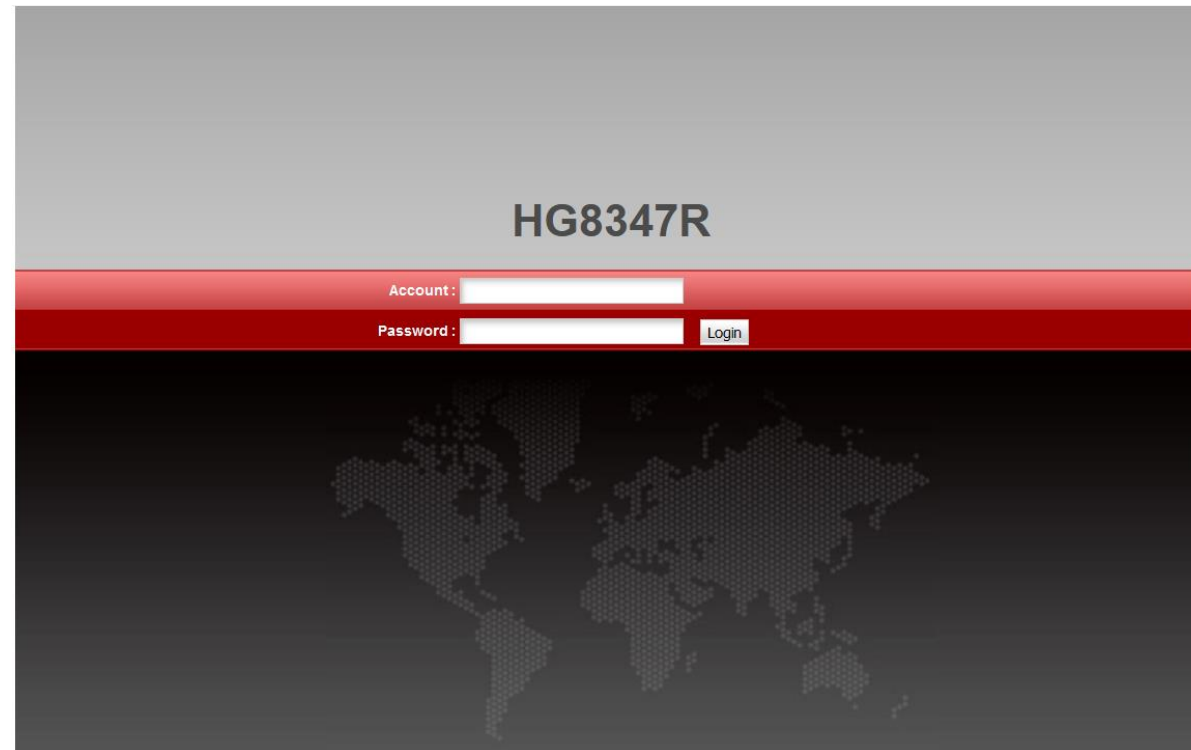

HG8347R

Account:

Password: Login